




NO DRILL ROMAN BLINDS


FITTING INSTRUCTIONS (V2)

YOU SHOULD HAVE


- Roman Blind

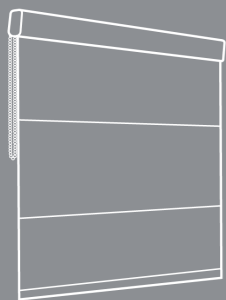

- Tightening Tool

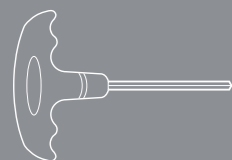

- P-clip

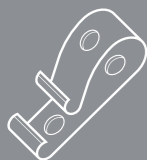

TOOLS REQUIRED

- Pencil
- Tape Measure
- Spirit Level




WARNING:
PLEASE TAKE CARE
WHEN UNPACKING
YOUR BLIND, DO NOT
USE A KNIFE OR ANY
SHARP OBJECTS.

THE INSTALLATION OF THIS PRODUCT SHOULD BE CONDUCTED BY SOMEONE COMPETENT IN DIY. PLEASE READ THE INSTRUCTIONS BEFORE OPERATING THIS PRODUCT.

STEP 1


Measure and mark required position of the blind inside the recess. Make sure that walls are solid and there are no obstructions in the way i.e. window handle.

Insert the plunger end of the blind into the recess first. Position it at an angle and push against the wall.

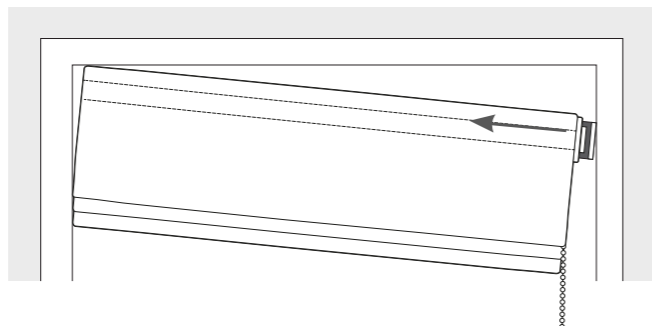


STEP 2

Place the control end of the blind until it's levelled and release pressure. The blind will hold itself in place.

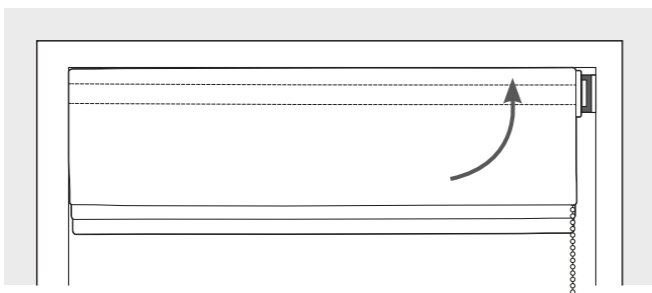

STEP 3

Before locking the blind in place measure it with spirit level to ensure it's straight.

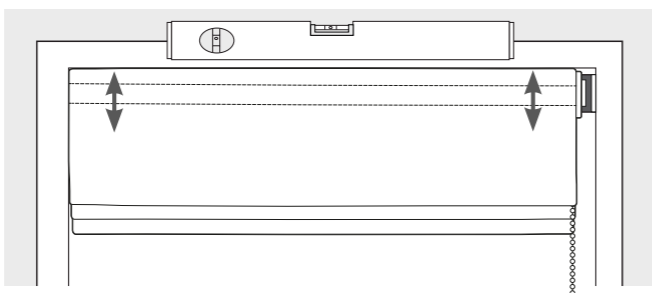

STEP 4

On the plunger end, detach part of the fabric from the headrail. Place the tightening tool supplied with your blind into the hole in the headrail. Gently turn the locking key towards the wall until you hear a click.

Do not continue to turn the locking key after you hear the click, as you may damage the locking mechanism.

NOTE: If the plunger end is on the left-hand side (Fig.1) turn anticlockwise. If the plunger is on the right-hand side (Fig.2) turn clockwise.

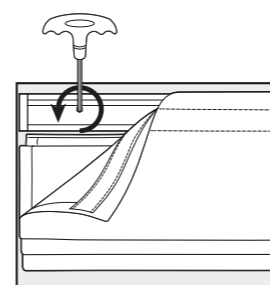


Fig.1

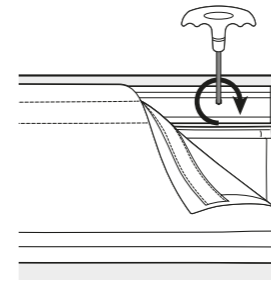


Fig.2


STEP 5

FITTING CHILD SAFETY P-CLIP

CHILDREN CAN BE STRANGLERED IF A SAFETY DEVICE IS NOT INSTALLED. ALWAYS USE A SAFETY DEVICE TO KEEP CORDS AND CHAINS OUT REACH OF CHILDREN.

The child safety device (P-clip) must be installed at maximum distance possible from the control mechanism to prevent the looped cord/chain from becoming slack. Use fixings that are suitable for the wall/surface to which you are mounting the P-clip.


1. Control chain must be inside the P-clip.
2. Ensure the chain is taut and that the P-clip is at the bottom of the loop. Make sure the chain can manoeuvre properly.
3. Screw the P-clip to a wall ensuring that the chain remains taut.

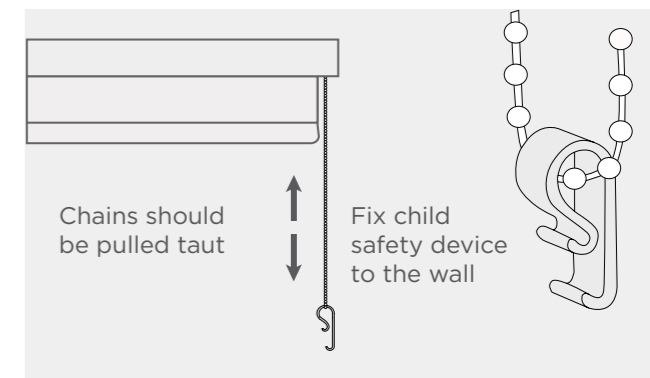

STEP 6

OPERATING THE BLIND

Pull the chain to raise and lower the blind. Do not continue pulling when the blind is fully retracted as you will damage it.

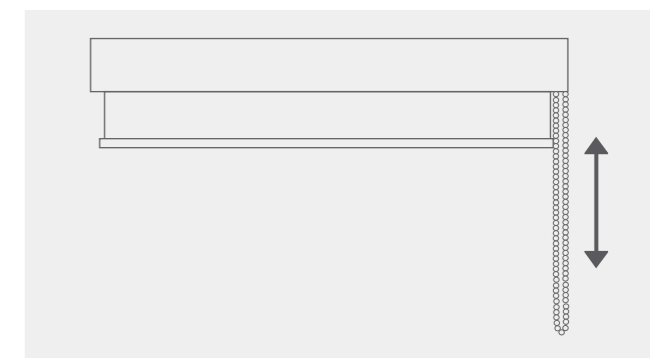


CHILD SAFETY

CORD SAFETY

The cords on the back are connected to breakaway clips which disconnect when weight is put on the cords.

To attach it, push the connector to the clip until it clicks.

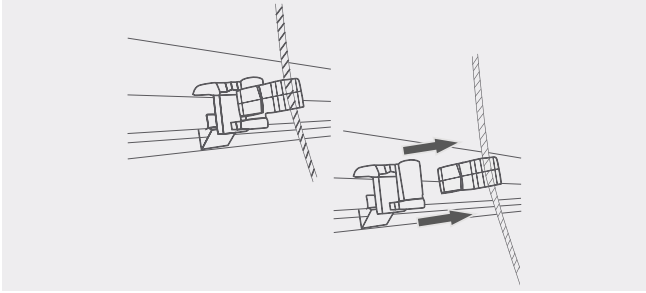

MAINTANANCE

If your window is exposed to high humidity or direct sunlight, occasionally check your blind and tighten if required.

The product is maintenance free however we recommend that regular visual checks are completed to ensure that no components have been damaged, which could result in operating difficulties and/or cause a safety risk. If any maintenance is required we recommend that the work is carried out immediately by a reputable blind company.

CLEANING INSTRUCTIONS:

Use a dry lint free cloth to wipe over the fabric of the blind.



WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.

To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.

